



BAUSCHER
GERMANY



Preisliste Pleasure

Artikelnummer	Bezeichnung	Preise
20094130051	Kaffeekanne komplett 0.30 l	27.00
20094131051	Kaffeekanne Unterteil 0.30 l	19.00
20094132051	Kaffeekanne Deckel 0.30 l	9.00
20094340051	Teekanne komplett 0.40 l	32.00
20094341051	Teekanne Unterteil 0.40 l	22.50
20094342051	Teekanne Deckel 0.40 l	10.50
20094605051	Milchgiesser o. Henkel 0.05 l	7.80
20094715051	Milchgiesser m. Henkel 0.15 l	9.95
20094730051	Milchgiesser m. Henkel 0.36 l	14.50
20095259051	Espresso obere 0.09 l	5.80
20097010051	Tasse untere zu 0.09 l	4.65
20095268051	Kaffee obere 0.18 l	6.95
20097118051	Kombi-UT 18 quadr.	5.90
20095276051	Tasse obere 0.26 l	9.80
20092876051	Suppentasse 0.26 l	13.50
20096676051	Bowl 0.26 l	9.50
20090365051	Teller quadr. flach 15	7.25
20090370051	Teller quadr. flach 20	9.95
20090374051	Teller quadr. flach 24	16.50
20090377051	Teller quadr. flach 27	19.80
20090380051	Teller quadr. flach 30	24.80
20090466051	Teller quadr. tief 16	9.80
20090473051	Teller quadr. tief 23	16.50
20090476051	Teller quadr. tief 26	19.80
20092171051	Platte dreieckig 21 cm	11.50
20092182051	Platte dreieckig 32 cm	29.80
20092186051	Platte dreieckig 36 cm	38.50
20092188051	Platte dreieckig 38 cm	49.00
20092601051	Platte Spezial 2-geteilt	25.00
20091801051	Teller Spezial 4-geteilt	18.50
20096660051	Bowl eckig 10	8.75
20096665051	Bowl eckig 15	11.25
20096669051	Bowl eckig 19	15.80
20096673051	Bowl eckig 23	18.90
20095286051	Tasse obere 0.36 l	9.95
20097036051	Tasse untere zu 0.36 l	6.80
20095628051	Becher obere 0.28 l	9.75